


GEN 4: RTK CONFIGURATION

1 Select 'Menu' at the bottom right-hand corner.



2 Select 'Applications', then 'ISOBUS VT'.

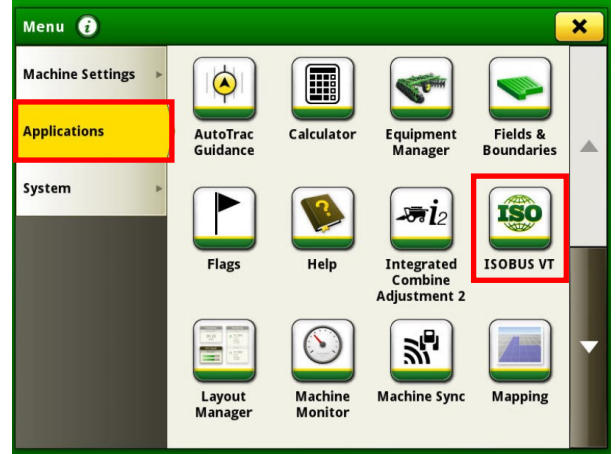

3 Select 'RTK', then 'Configure'.



4 Select 'Vehicle', then enter your Network ID and Frequency. Select 'Accept'.

