


# GEN 4: MOISTURE SENSOR TEMPERATURE CALIBRATION


1 Select 'Menu' at the bottom right-hand corner.




2 Select 'Machine Settings', then 'Calibrations & Procedures'.

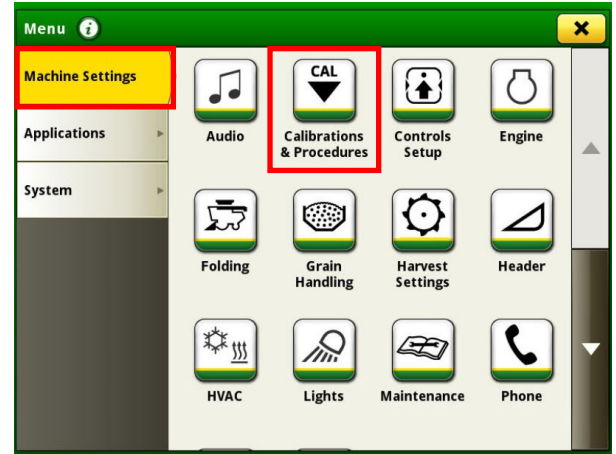

3 Select 'Harvest', then 'Moisture Sensor Temperature'.

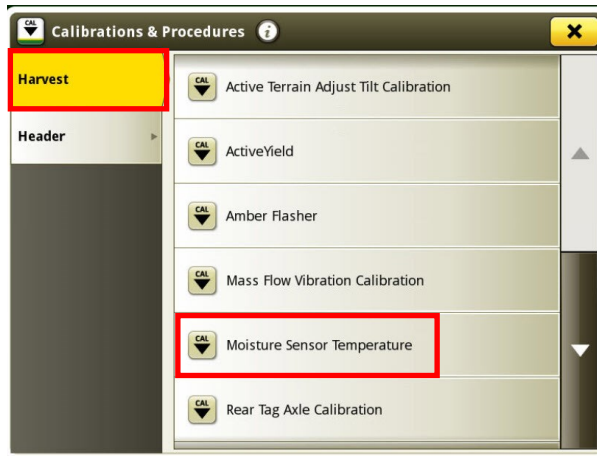

4 Select 'Calibrate'.

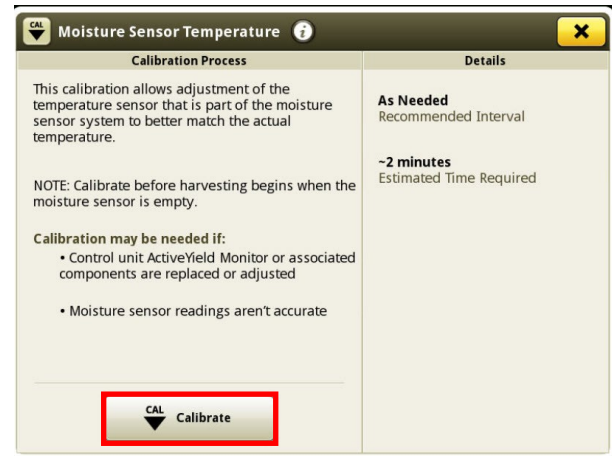

5 Use the '+/-' buttons to adjust the sensor temperature, then select 'Save'.

