

Set Track 0

45.200

1

starting point, and press "Set A" Step 3: Position Machine in

Switching from Straight Track to Adaptive Curves.

"Tracking Mode" box located by Step 1. Example:

Note: In order to change AutoTrac modes. Use the

*Note: If Steering is not turned "On" AutoTrac will not

AutoTrac in any Machine. The "Resume" switch location

Note: This same process is used when setting up

Step 7) will be the only variance.

Later Tab" you will be taken back "Note: If you choose the "Set B Cancel

to the home screen with the option

to "Set B" there.

least 30ft, select "Set B" Step 4: After driving at

./. Step 6: Press the Step 5: After pressing the "Set B" Tab, the

0

to a green "A" when AutoTrac is Active. machine you are operating. The Pie should turn Step 7: Press the Resume button in the respective of the pie.

Cancol

Seed IS Larbor


0

2 15 +III

"Steer Off" button should be 3 pieces done this, there On. Once you have to turn the Steering this tab to complete the line. Accept button will become active. Press 4 194 Set Track D Det Spacing Puint A Lat 170.7300 34.34075364 45,200

1

5 8

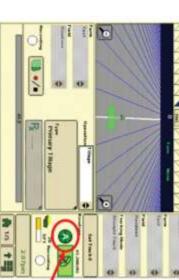

© 2011 Horizon Equipment

Turn sheet over for Adaptive Curve Setup and TCM Calibration.