



# GREENSTAR: YIELD CALIBRATION


1 Select 'Menu' at the bottom right-hand corner.

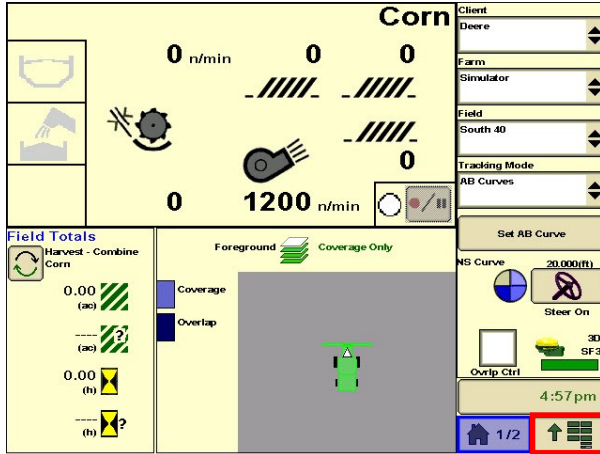


2 Select 'Combine'.

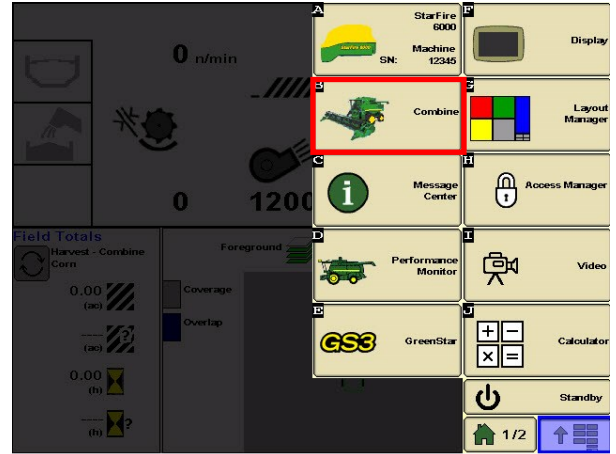


3 Select 'Diagnostics'.

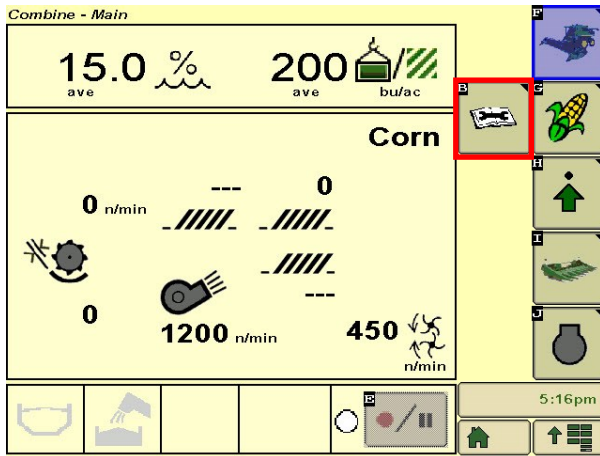


4 Select 'Calibrations'. Choose 'Yield', then 'Next'.

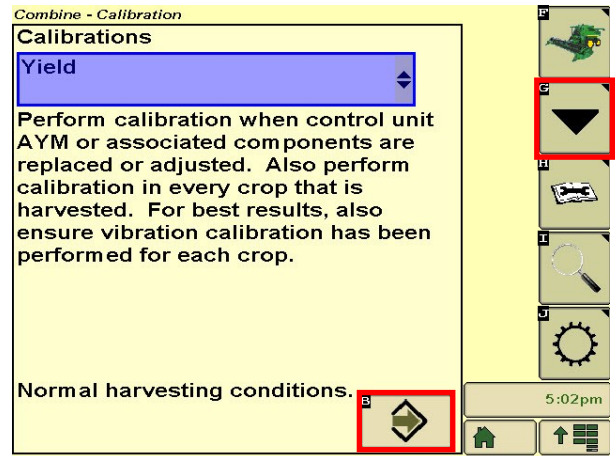

5 Make sure you meet all requirements, then select 'Next'.

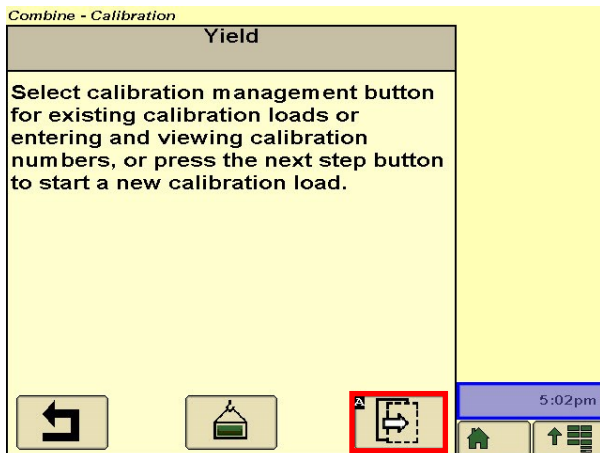


6 Harvest your sample load, then select 'Next'.

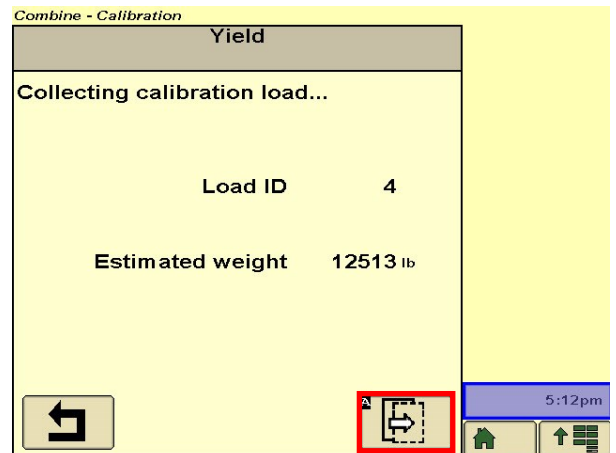


# GREENSTAR: YIELD CALIBRATION


7 Select 'Manage Loads'.

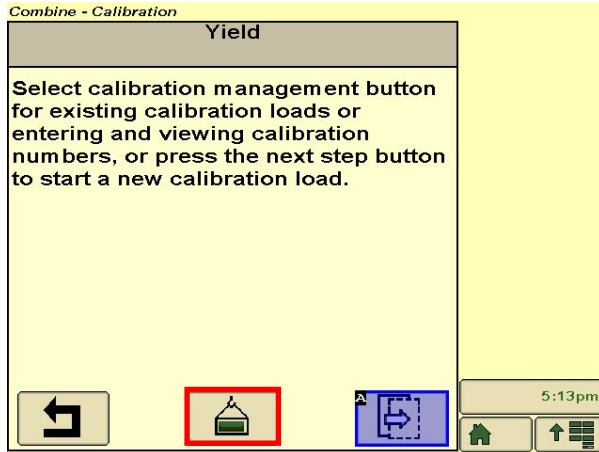

8 Enter the actual weight of your sample load.

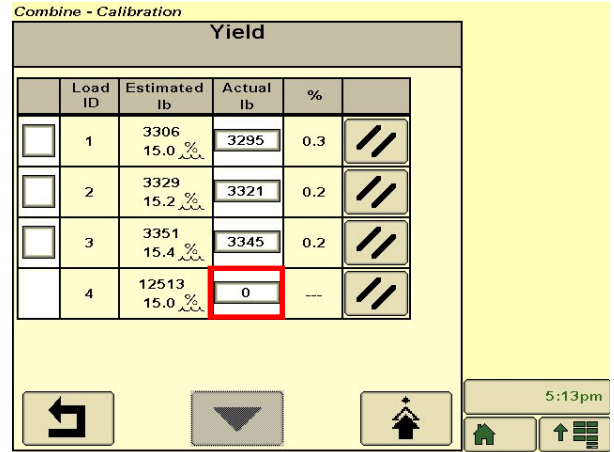

9 Checkmark the samples you'd like to use, then select 'Calibrate'.

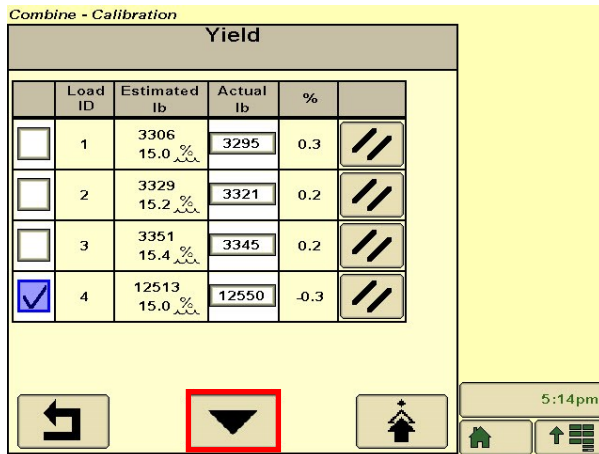

10 Select 'Accept'.

